



Sony CFS-204 Radio Cassette-Corder Batteries Replacement

If your batteries are dead or you don't have access to a wall outlet for power, replacing the batteries will allow you to listen to your radio wherever you like.

Written By: Daniel



INTRODUCTION

This guide will demonstrate how to replace the batteries for your radio.



PARTS:


- [Batteries](#) (6)


Size C

Step 1 — Batteries



- Press down on the two tabs at the top of the door.
- Rotate the door away from the radio, towards you.
- Lift the door out of the three smaller tabs on the bottom.

 Ensure the radio is turned off to avoid the possibility of electric shock.

 The battery compartment door is not shown.

Step 2 — Batteries



- Push the batteries against the spring and pull out using your finger to remove them.
- ☑ To insert the new batteries, push the negative end of the 1st battery against a spring and follow the diagram pictured to insert the batteries in the correct orientation.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-26 11:39:22 PM.